

Cisco Switch 3
..... 3
..... 3
IP 3
Timestamp 4
..... 4
DNS 6
..... 6

Cisco Switch

: <https://cdn.technet24.ir/Downloads/Cisco/IOS/>

```

                VLAN   가   vlan.dat   delete vlan.dat
.   erase start                reload                .
reload                no

```

```

#del vlan.dat
#erase start
#reload
no

```

```

switch#>show version //
switch#>show interface vlan //
switch#>show running-config //

R1# show flash                -> Flash
R1# show ip route                ->
R1# show ip interface brief        ->
R1# show interface [Interface Name]    ->
R1# show controllers [Interface Name]    ->

R1# show cdp neighbor                ->
R1# show cdp neighbor detail        ->          IP

R1# show running-config                -> Running-Config (RAM)
R1# show startup-config                -> Startup-Config (NVRAM)

R1# copy running-config startup-config    -> RAM      NVRAM
R1# erase startup-config                -> NVRAM

```

IP

```

Switch# configure terminal
Switch(config)# interface vlan 1
Switch(config-if)# ip address 192.168.1.2 255.255.255.0
Switch(config-if)# no shutdown

```

```
Switch(config-if)# exit  
Switch(config)# ip default-gateway 192.168.1.1
```

```
DHCP          1.          interface vlan 1          VLAN 1  
  . 2. ip address dhcp          IP          . 3. no shutdown  
VLAN 1 가          . 4  
.  
가          dhcp IP          show running-config          IP  
  .          show dhcp lease          show interface vlan 1          IP
```

Timestamp

```
# conf t  
(config) # service timestamps debug datetime localtime // debug  
(config) # service timestamps log datetime localtime // log
```

</WRAP prewrap>

```
# sh clock //  
# clock set 13:13:13 april 20 2020 //  
# clock timezone kst 9 // ( )  
  
# conf t  
(config) # ntp server time.bora.net // NTP (boranet)  
# sh ntp status // NTP
```

•

가

```
gmate(config)# line 0 16  
gmate(config-line)# logg sync
```

•

```
gmate(config)#line console 0  
gmate(config-line)# exec-timeout 0
```

•

```
gmate(config)# enable secret switch
```

switch

-

```
gmate#show line
```

VTY

```
gmate(config)#line vty 0 15
gmate(config-line)# password switch
```

0~ 15

가 switch

-

```
gmate#show runnign-config
```

- vty

```
gmate(config)#service password-encryption
```

-

```
gmate(config)#banner motd *
Authorized access only!!
*
```

*

-

```
gmate(config)# default-value exec-character-bits 8
gmate(config)# banner motd *
가          !!
*
gmate(config)#
```

-

```
gmate(config)# interface f 1/0/1
```

```
gmate(config)# description gmatel
gmate(config)# interface f 1/0/2
gmate(config)# description gmate2
```

•

```
enable
config terminal
no ip domain-lookup
enable secret $gm@te2oo8

alias exec c config terminal
alias exec r show running-config
alias exec i show ip route
alias exec b show ip interface breif

line consol 0
logging synch
exec-timeout 0
lin vty 0 5
pass $gm@te2oo8
exit
hostname
```

DNS

```
cisco(config)#
cisco(config)#ip domain-lookup
cisco(config)#ip name-server 210.20.64.21
```

•

```
cisco(config)# no ip domain-lookup
```

• stp

```
Switch# show spanning-tree
Switch# show spanning-tree vlan [num]
Switch# show spanning-tree vlan [num] detail
```

•

```
Switch# show interface status
```

- link aggregation

```
Switch(config)# int port-channel 1
Switch(config-if)# int range gi 1/0/5-6
// chnnel-group 1 mode on
channel-group 1 mode active

Switch(config-if)# channel-proto lacp
Switch(config-if)# exit

Switch(config)# int port-channel 1
Switch(config-if)# switchport mode access
Switch(config-if)# switchport access vlan 10

Switch# show lacp neighbor
```

From:

<https://atl.kr/dokuwiki/> - **AllThatLinux!**

Permanent link:

https://atl.kr/dokuwiki/doku.php/cisco_switch_%EC%84%A4%EC%A0%95?rev=1650612860

Last update: **2022/04/22 07:34**

