

Cisco Switch	3
	3
	3
IP	3
 Timestamp	4
	4
 DNS	6
	6

Cisco Switch

: <https://cdn.technet24.ir/Downloads/Cisco/IOS/>

reload	VLAN	가	vlan.dat	delete vlan.dat
..	erase start			reload
			no	

```
#del vlan.dat
#erase start
#reload
no
```

```
switch#>show version //
switch#>show interface vlan //
switch#>show running-config //

R1# show flash                                -> Flash
R1# show ip route                             ->
R1# show ip interface brief                   ->
R1# show interface [Interface Name]          ->
R1# show controllers [Interface Name]        ->

R1# show cdp neighbor                         ->
R1# show cdp neighbor detail                  -> IP

R1# show running-config                      -> Running-Config (RAM)
R1# show startup-config                     -> Startup-Config (NVRAM)

R1# copy running-config startup-config      -> RAM      NVRAM
R1# erase startup-config                    -> NVRAM
```

IP

```
Switch# configure terminal
Switch(config)# interface vlan 1
Switch(config-if)# ip address 192.168.1.2 255.255.255.0
Switch(config-if)# no shutdown
```

```
Switch(config-if)# exit
Switch(config)# ip default-gateway 192.168.1.1
```

DHCP	1.	interface vlan 1	VLAN 1
. 2. ip address dhcp	IP	. 3. no shutdown	
VLAN 1 가	. 4		
 •			
가	dhcp IP show dhcp lease	show running-config show interface vlan 1	IP IP

Timestamp

```
# conf t
(config) # service timestamps debug datetime localtime // debug
(config) # service timestamps log deatetime localtime // log
```

```
# sh clock //
# clock set 13:13:13 april 20 2020 //
# clock timezone kst 9 // (      )

# conf t
(config) # ntp server time.bora.net // NTP          (boranet)
# sh ntp status // NTP
```

•

가

```
gmate(config)# line 0 16
gmate(config-line)# logg sync
```

•

```
gmate(config)#line console 0
gmate(config-line)# exec-timeout 0
```

•

```
gmate(config)# enable secret switch
```

switch

•

```
gmate#show line
```

VTY

```
gmate(config)#line vty 0 15  
gmate(config-line)# password switch
```

0 ~ 15

가† switch

•

```
gmate#show runnign-config
```

• vty

```
gmate(config)#service password-encryption
```

•

```
gmate(config)#banner motd *\nAuthorized access only!!\n*
```

*

•

```
gmate(config)# default-value exec-character-bits 8\ngmate(config)# banner motd *\n    가          !!\n*\ngmate(config)#+
```

•

```
gmate(config)# interface f 1/0/1\ngmate(config)# description gmate1
```

```
gmate(config)# interface f 1/0/2
gmate(config)# description gmate2

•
```

```
enable
config terminal
no ip domain-lookup
enable secret $gm@te2oo8

alias exec c config terminal
alias exec r show running-config
alias exec i show ip route
alias exec b show ip interface brief
```

```
line consol 0
logging synch
exec-timeout 0
lin vty 0 5
pass $gm@te2oo8
exit
hostname
```

DNS

```
cisco(config)#
cisco(config)#ip domain-lookup
cisco(config)#ip name-server 210.20.64.21
```

```
•
```

```
cisco(config)# no ip domain-lookup
```

```
• stp
```

```
Switch# show spanning-tree
Switch# show spanning-tree vlan [num]
Switch# show spanning-tree vlan [num] detail
```

```
•
```

```
Switch# show interface status
```

- link aggregation

```
Switch(config)# int port-channel 1
Switch(config-if)# int range gi 1/0/5-6
// chnnel-group 1 mode on
channel-group 1 mode active

Switch(config-if)# channel-proto lacp
Switch(config-if)# exit

Switch(config)# int port-channel 1
Switch(config-if)# switchport mode access
Switch(config-if)# switchport access vlan 10
```

```
Switch# show lacp neighbor
```

From:
<https://atl.kr/dokuwiki/> - AllThatLinux!

Permanent link:
https://atl.kr/dokuwiki/doku.php/cisco_switch_%EC%84%A4%EC%A0%95?rev=1650612952

Last update: **2022/04/22 07:35**

